

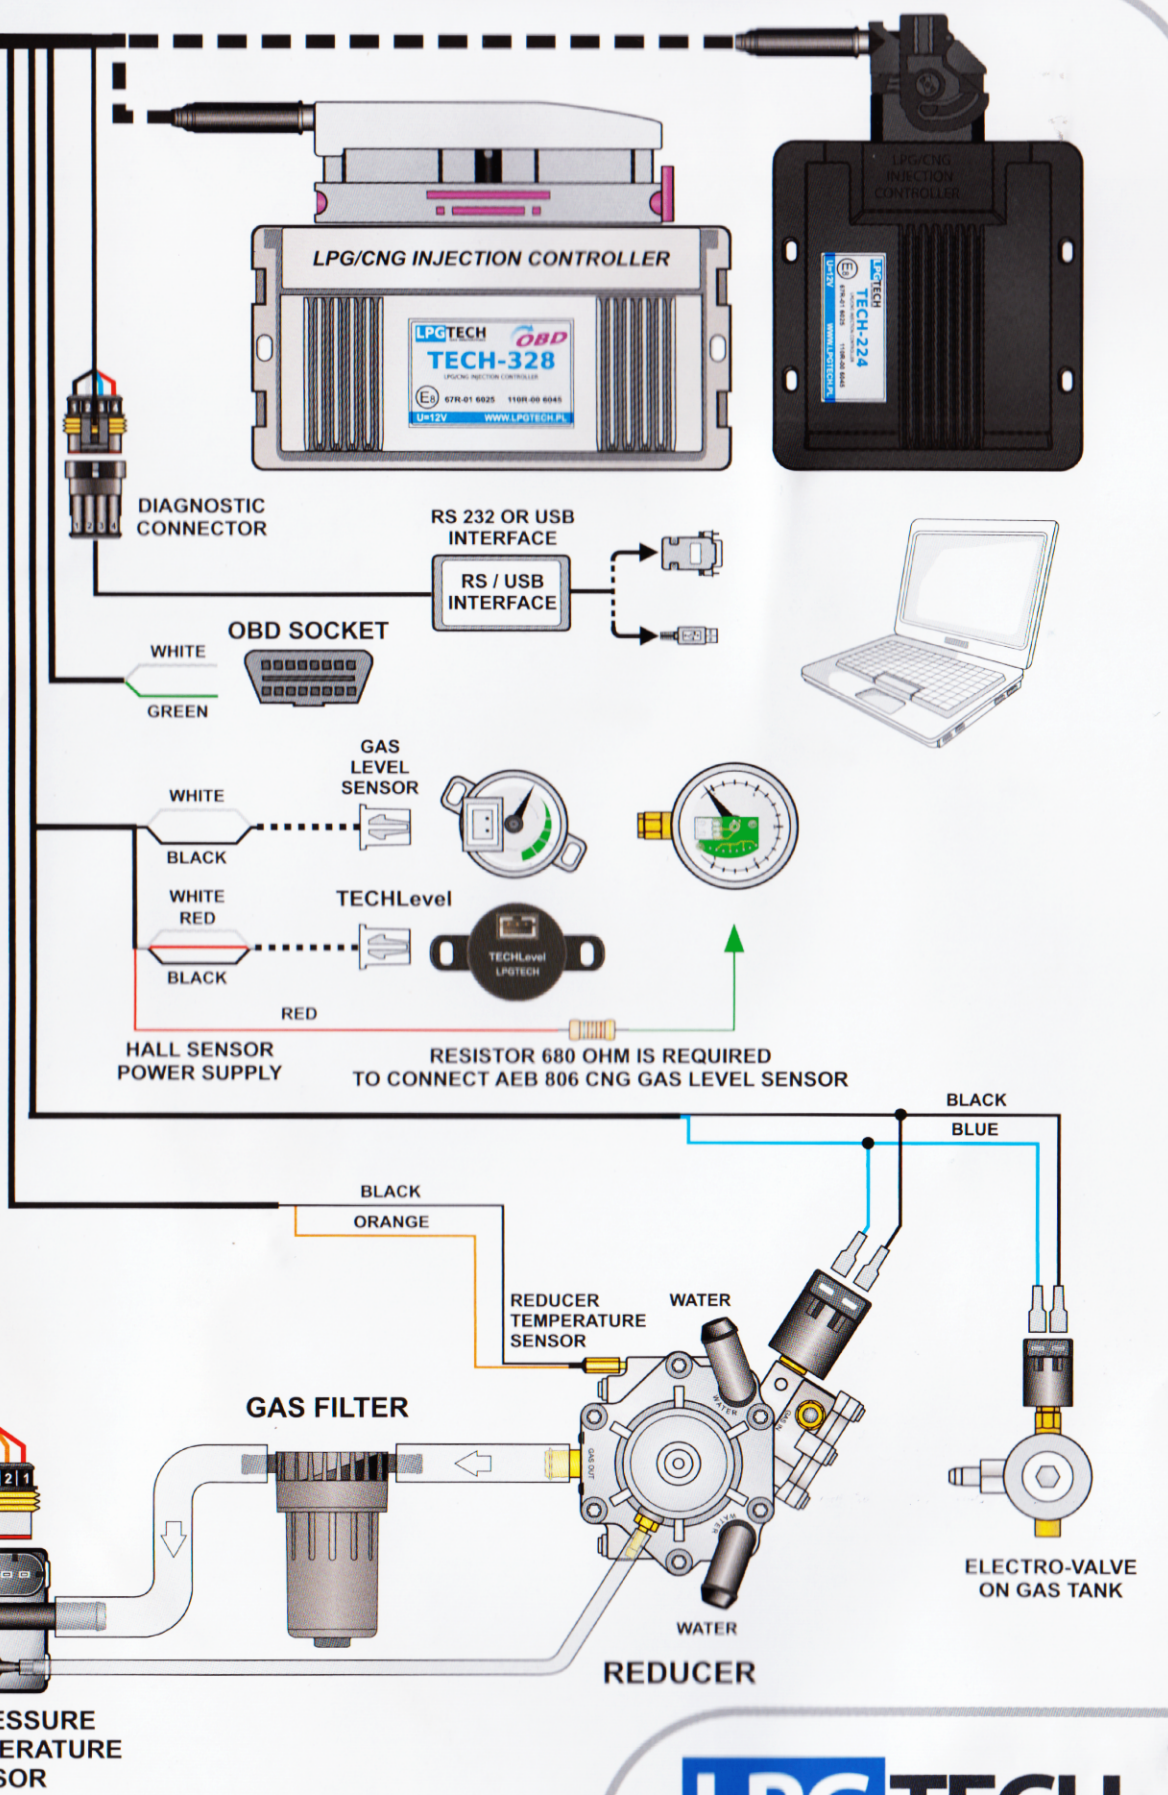


IGNITION SWITCH
OR +12V FROM PETROL INJECTORS

PETROL INJECTORS 1-8
GAS INJECTOR 1-8

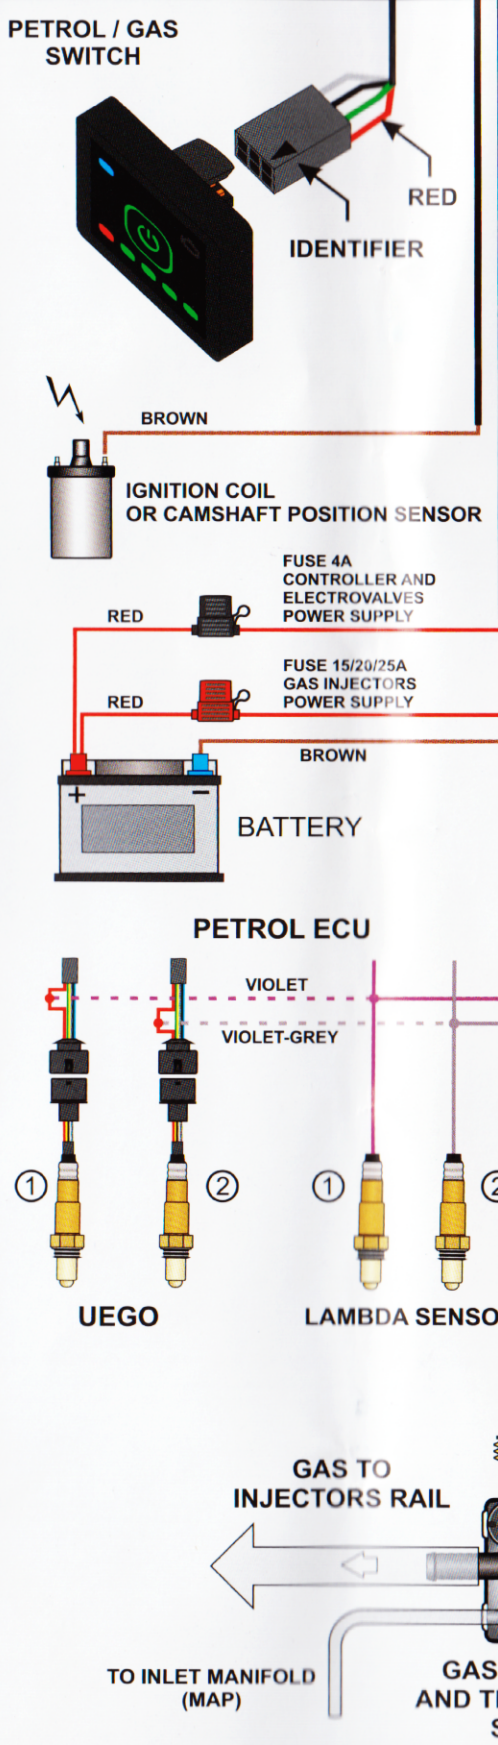

TECH Controllers - connection diagram

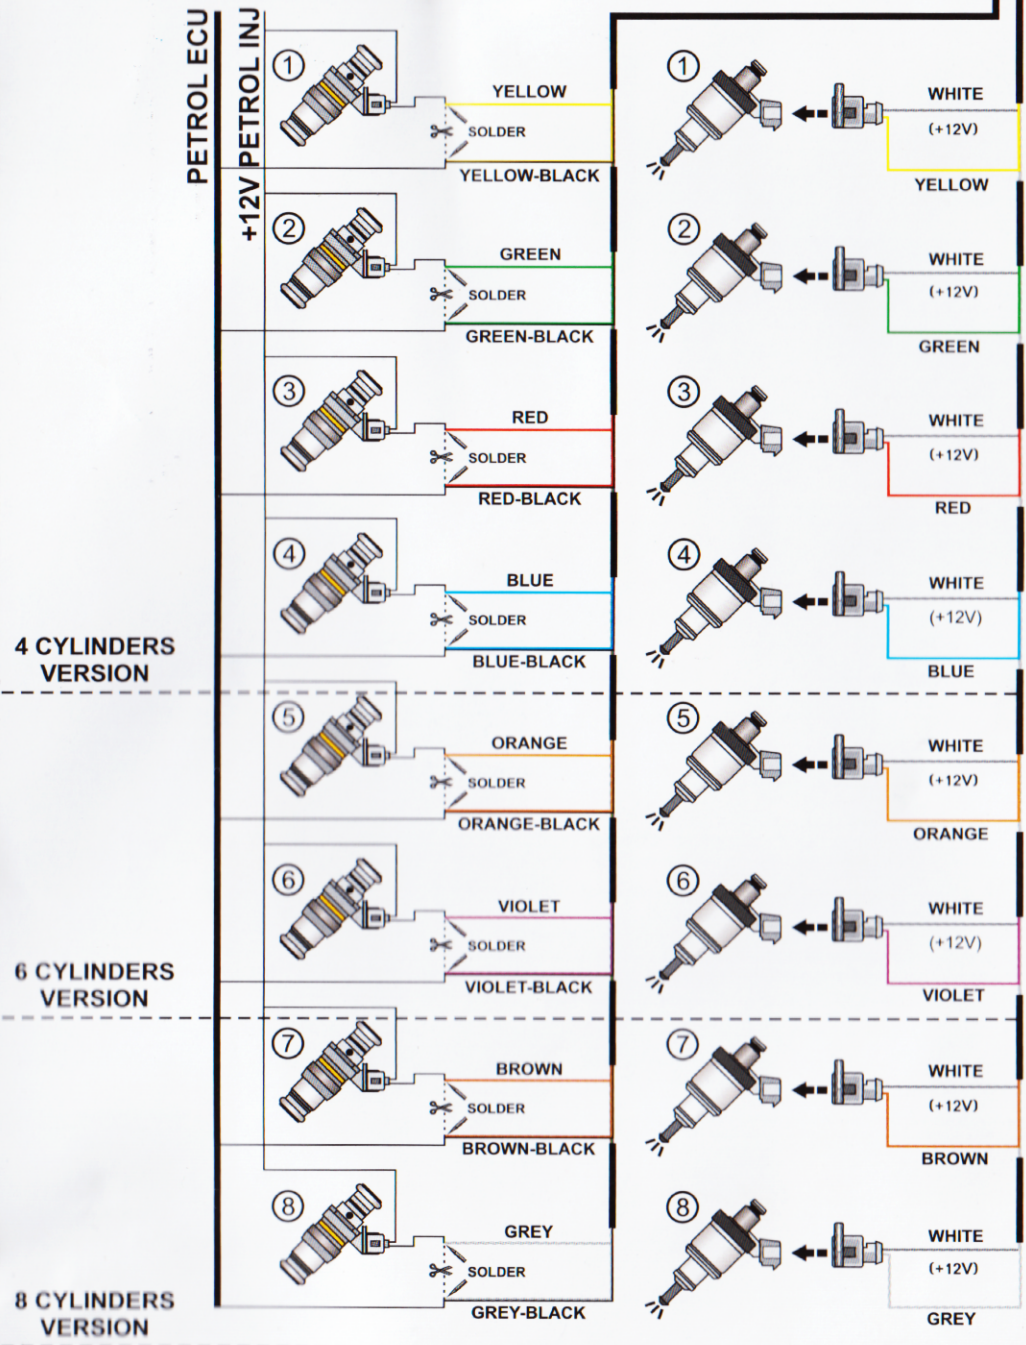